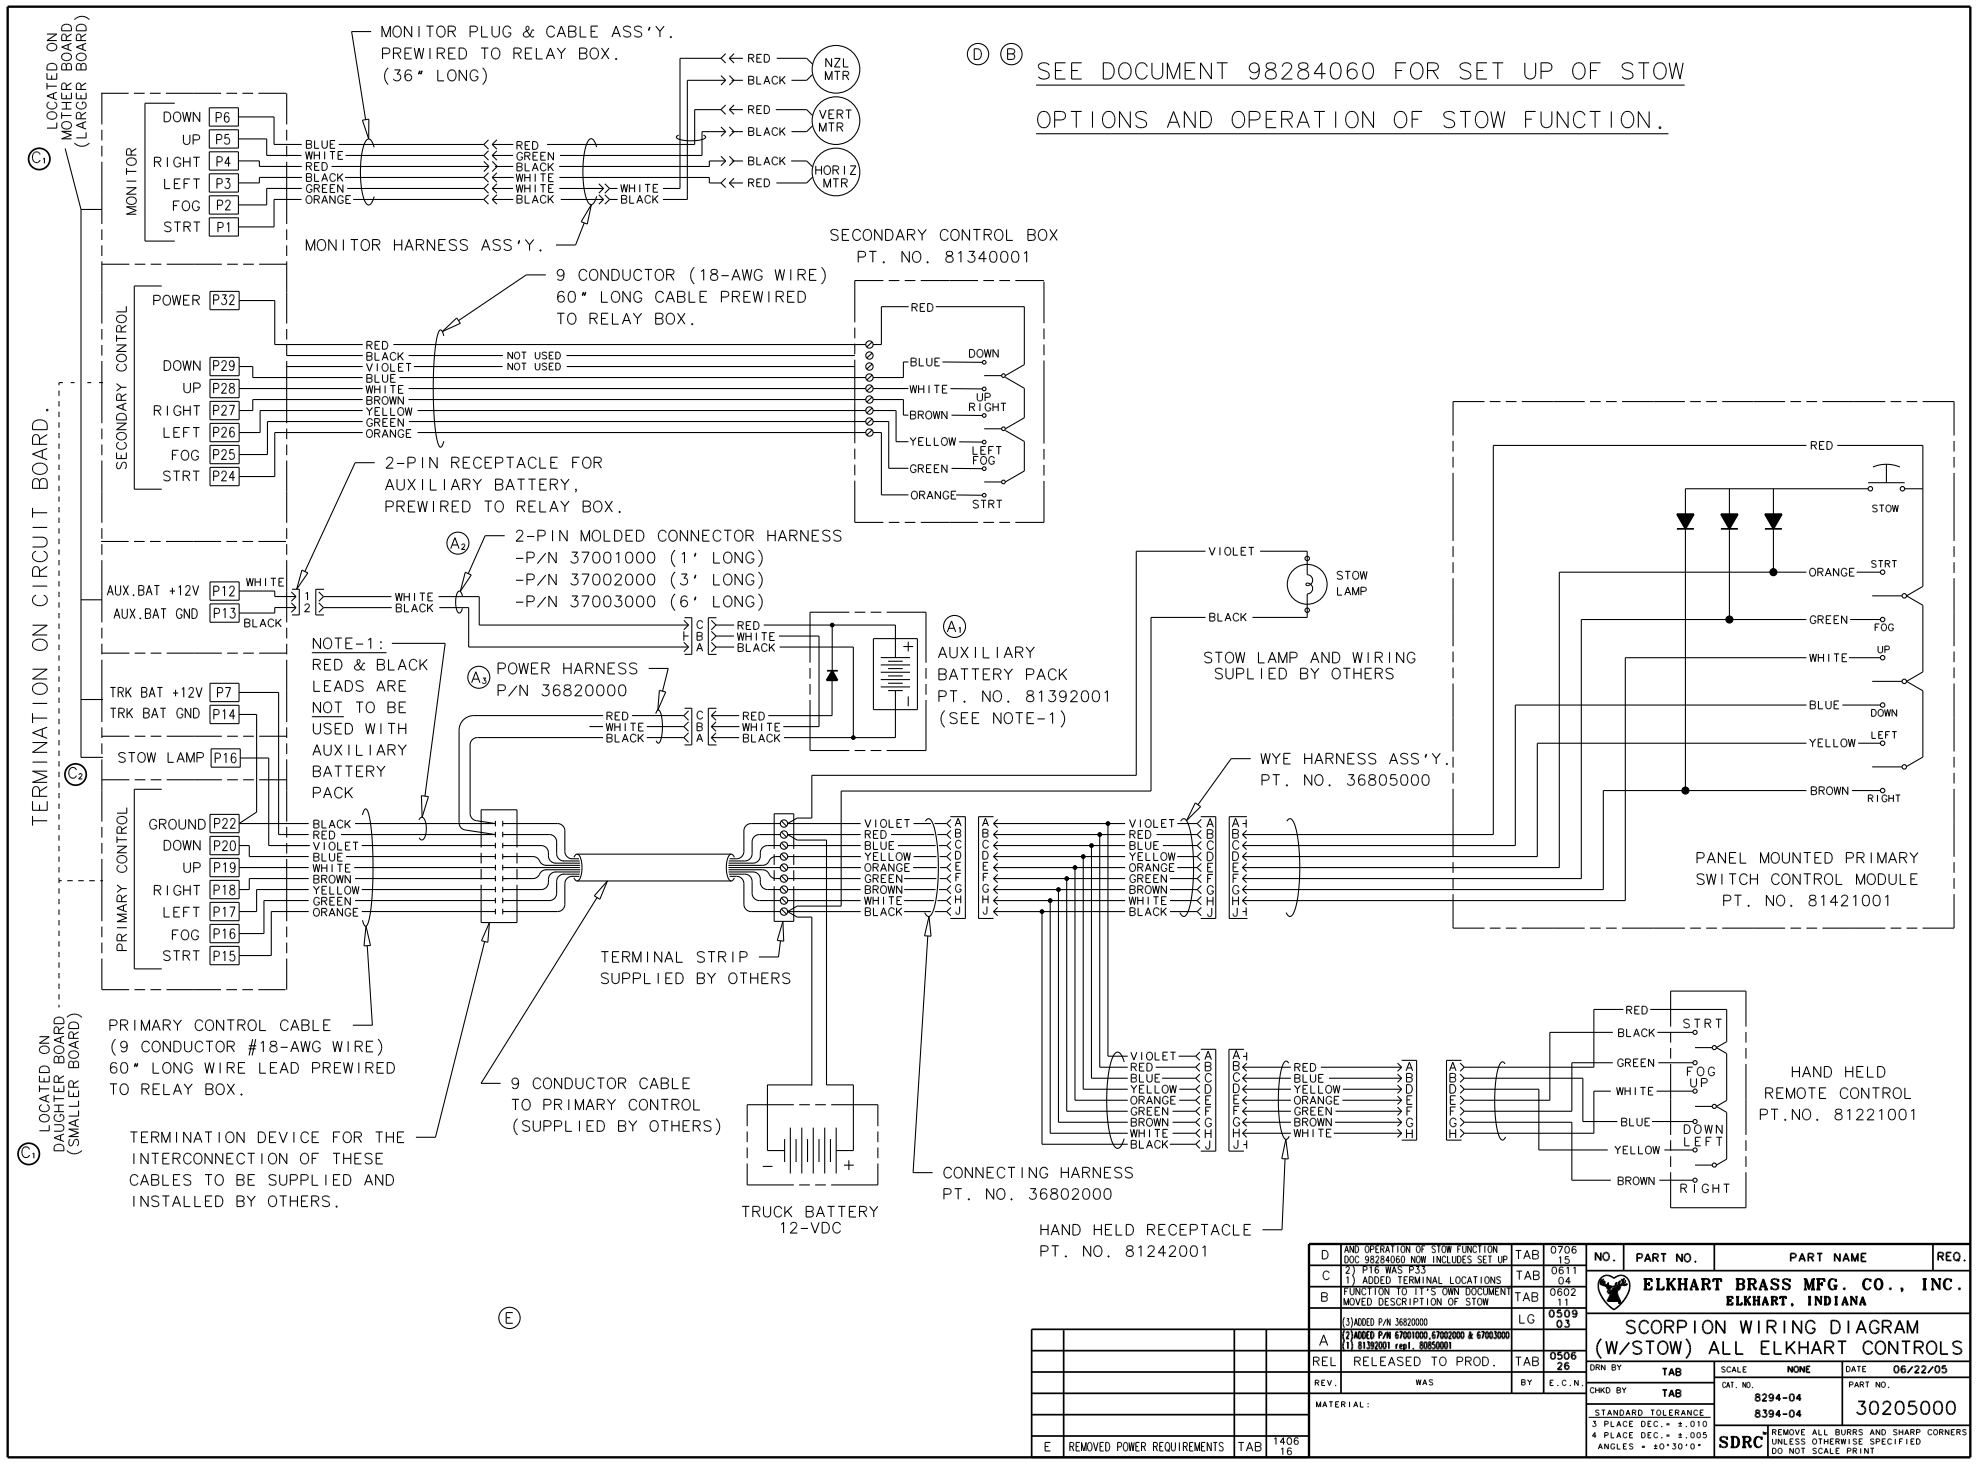

D	AND OPERATION OF STOW FUNCTION DOC 98284060 NOW INCLUDES SET UP	TAB	0706 15
C	2) P16 WAS P33 1) ADDED TERMINAL LOCATIONS	TAB	0611 04
B	FUNCTION TO IT'S OWN DOCUMENT MOVED DESCRIPTION OF STOW	TAB	0602 11
	(3)ADDED P/N 36820000	LG	0509 03
A	(2)ADDED P/N 67001000,67002000 & 67003000 (1) 81392001 repl. 80850001		
REL	RELEASED TO PROD.	TAB	0506 26
REV.	WAS	BY	E.C.N.
E	REMOVED POWER REQUIREMENTS	TAB	1406 16

MATERIAL:

NO.	PART NO.	PART NAME	REQ.

ELKHART BRASS MFG. CO., INC.
ELKHART, INDIANA

SCORPION WIRING DIAGRAM (W/STOW) ALL ELKHART CONTROLS

DRN BY	TAB	SCALE	NONE
CHKD BY	TAB	DATE	06/22/05
STANDARD TOLERANCE		CAT. NO.	8294-04 8394-04
3 PLACE DEC.= ±.010 4 PLACE DEC.= ±.005 ANGLES = ±0°30'0"		PART NO.	30205000

SDRC

REMOVE ALL BURRS AND SHARP CORNERS UNLESS OTHERWISE SPECIFIED DO NOT SCALE PRINT