

ELKHART BRASS

Fire Fighting Equipment

X-Stream®

***Industrial* Electrically Actuated Nozzles**

SM1000BE – SM2000BE HL/HLGM
Installation, Operation, & Maintenance Instructions
FOR ATEX APPLICATIONS



98369000 REV. A

PRODUCT SAFETY



Important:

Before installing and operating this equipment, read & study this manual thoroughly. Proper installation is essential to safe operation. In addition, the following points should be adhered to in order to ensure the safety of equipment and personnel:

- All personnel who may be expected to operate this equipment must be thoroughly trained in its safe and proper use.
- Before flowing water from this device, check that all personnel (fire service and civilian) are clear of the stream path. Also, confirm stream direction will not cause avoidable property damage.
- Become thoroughly familiar with the hydraulic characteristics of this equipment, and the pumping system used to supply it. To produce effective fire streams, operating personnel must be properly trained.
- Always open and close valves supplying this equipment slowly, so that the piping fills with water slowly, thus preventing the possible occurrence of water hammer.
- After each use, and on a scheduled basis, inspect equipment per instructions in the maintenance section.
- Keep fingers and hands clear of moving parts
- Disconnect power prior to servicing.
- All equipment must be installed in accordance with ATEX requirements (EN/IEC 60079-14) as appropriate and in areas where equipment classification is suitable.



WARNING: Do not attempt to disconnect or work on any electrical equipment in this system unless power is removed or the area is known to be non-hazardous.

NOZZLE INFORMATION:

DETAILS:

TABLE OF CONTENTS

I. NOZZLE CALLOUT.....	4
II. OVERVIEW.....	5
III. INSTALLATION INSTRUCTIONS.....	6
IV. SPECIFICATIONS.....	6
V. OPERATING INSTRUCTIONS.....	6
VI. NOZZLE HYDRAULIC DATA.....	7
VII. MAINTENANCE.....	8
VIII. TROUBLESHOOTING.....	8

*PARTS DRAWING – Please visit our website at www.elkhartbrass.com for the most current parts drawings.

I NOZZLE CALLOUT




II OVERVIEW

The Select-O-Matic nozzle is the most efficient and effective master stream combination nozzle available to the fire service today. It is designed to flow and maintain sufficient pressure to apply that flow as an effective fire stream. No manual gallonage setting is necessary; the spring mechanism within the nozzle adjusts automatically to provide the desired flow. This nozzle is ideal for any master stream application: ladder pipe, deck gun, portable monitor, elevated platform, etc.

Select-O-Matic industrial nozzles are constructed from rugged, heavy-duty brass. The enclosed stainless steel spring mechanism adjusts automatically to flow fluctuations and sets the discharge orifice size accordingly. The design of the nozzle assures you of efficient fire streams from straight stream through wide fog.

Electric X-Stream® Nozzle Features:

- **Inlet** – 3.5” N.H. Threaded female swivel
- **Construction** – All brass and stainless steel
- **Stream Adjustment** – Electric with manual override adjusts from straight stream to wide fog (Knob does not move when actuated electrically)
- **Flow** – SM-1000 – Flow: 300GPM @ 60psi – 1000GPM @ 82psi (3785 LPM @ 5.7 BAR)
SM-1250 – Flow: 388GPM @ 50psi – 1250GPM @ 75psi (4731 LPM @ 5 BAR)
SM-2000 – Flow: 300GPM @ 38psi – 2000GPM @ 82psi (7570 LPM @ 5 BAR)
(See Nozzle flow graphs on page 7 and check catalog for current specifications)
- **Motors** – 120 VAC NEMA 4 (IP-67) rated synchronous motors (non-arcing)
 - Constant torque and current output in start, running, and stall
 - **CE**  II 3 G c (Ex nA II T4)
 - Will not cause damage or increase in current when motor is stalled
 - Instantaneous start, stop, and reverse
 - Residual (Power Off) torque is always present
 - Long life and exceptional reliability
- **Pattern Adjustment Range** – Nozzle stops are factory set at 100° (0° to 100°)
- **Rate of Motion** – 0.0428 Sec/°
- **Manual Override** – Hand wheels provided for straight stream and fog stream movements. Hand wheel will not rotate when nozzle is operated electrically.
- CE ATEX 94/9/EC Certification (Group II, Category 3)



WARNING: Do not take cover off or disassemble Nozzle Motor. If cover is/has been removed, the warranty is void and the service life of the motor is significantly reduced.

III INSTALLATION INSTRUCTIONS

Installation Steps

1. Insure the gasket is present in the nozzle before installing onto Stream Shaper (Model# 284-B).
2. Position nozzle so the motor is located on the top of the nozzle. You may position the motor on the left side of the nozzle as well; however, we recommend the top position for optimal clearance.
3. Tighten the Stream Shaper to monitor using a spanner wrench. Then tighten the nozzle swivel base to the Stream Shaper.
4. Install cable plug to the receptacle on the nozzle motor aligning locator key in plug with key in receptacle. Screw swivel down tight on male thread of receptacle.
5. Install corrugated black safety boot on cable connector so split lines up with cable. Install clamp around top of boot and connector swivel. Tighten clamp around swivel and boot.

IV SPECIFICATIONS

General Specs

- Input Power 120 VAC (50/60Hz.) 1 Phase
- Electrical Load 0.30 AMPS
- Nozzle Dimensions Ø6 7/8" X 9 5/16" L (SM1000BE-HL & SM1250BE-HL)
- Nozzle Dimensions Ø7 15/16" X 9 7/8" L (SM2000BE-HL)
- Nozzle Weight Approx. 32 lbs.
- Operating Temperature Range -40°C to +85°C

ATEX Product Marking

-   II 3 G c
T3 Ex nA IIC T3

V OPERATING INSTRUCTIONS


Nozzle is normally electrically actuated through Monitor Control System. It will free wheel at both ends of stroke (fog and straight stream). Please note that the nozzle does not have a shut-off function.

When monitor is not in use, return it to its designated park position. We recommend storing in full fog facing downward to allow nozzle to drain. However, some operating requirements may override this.


Manual Override Operation

1. Push knob in and hold to engage manual override.
2. Turn knob clockwise to move nozzle tip into fog position, and counter-clockwise to move nozzle tip into straight stream position.


VI NOZZLE HYDRAULIC DATA



DISCHARGE DATA

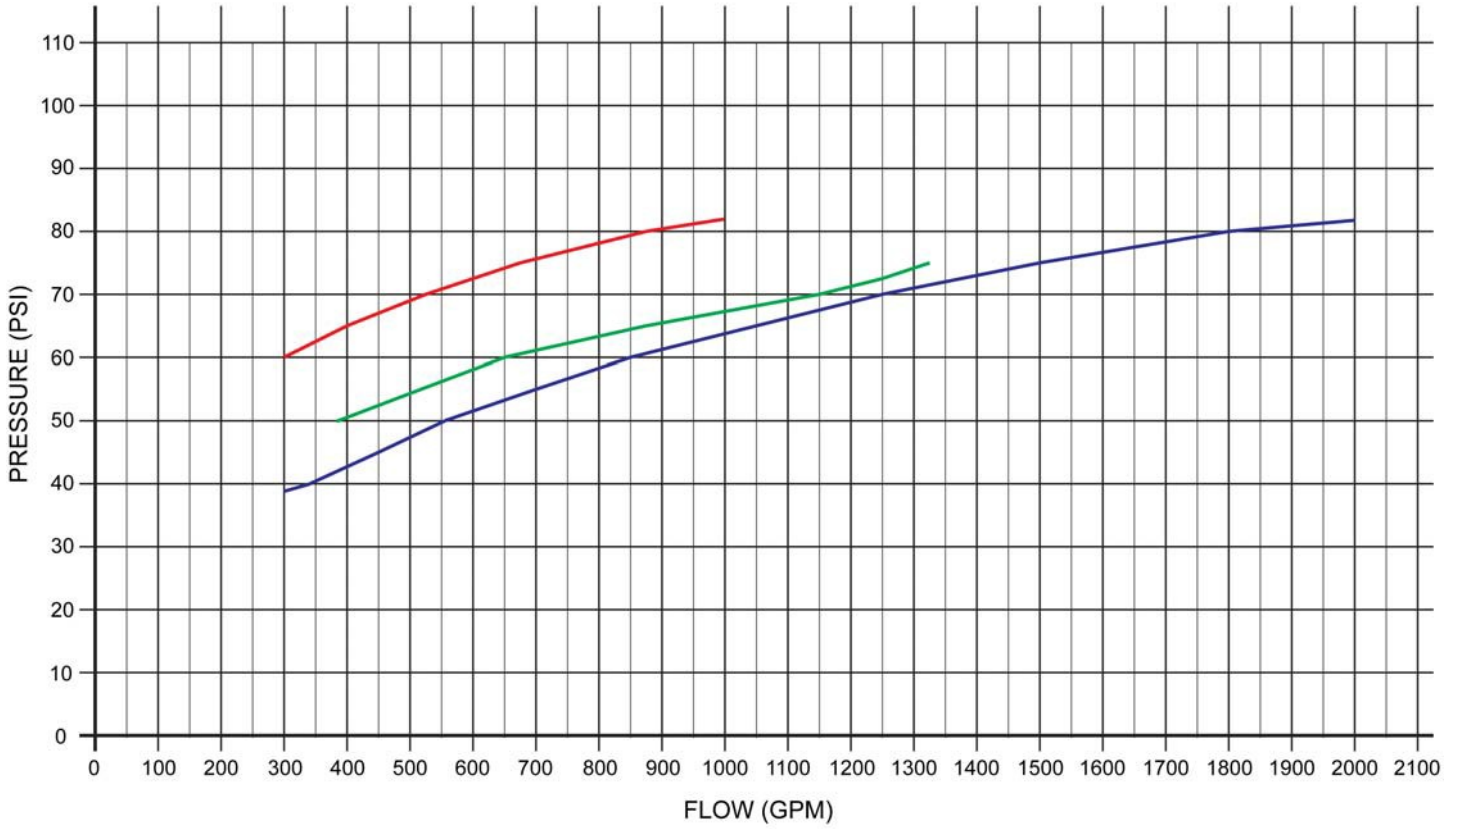


284 & 284-B Stream Shaper Friction Loss

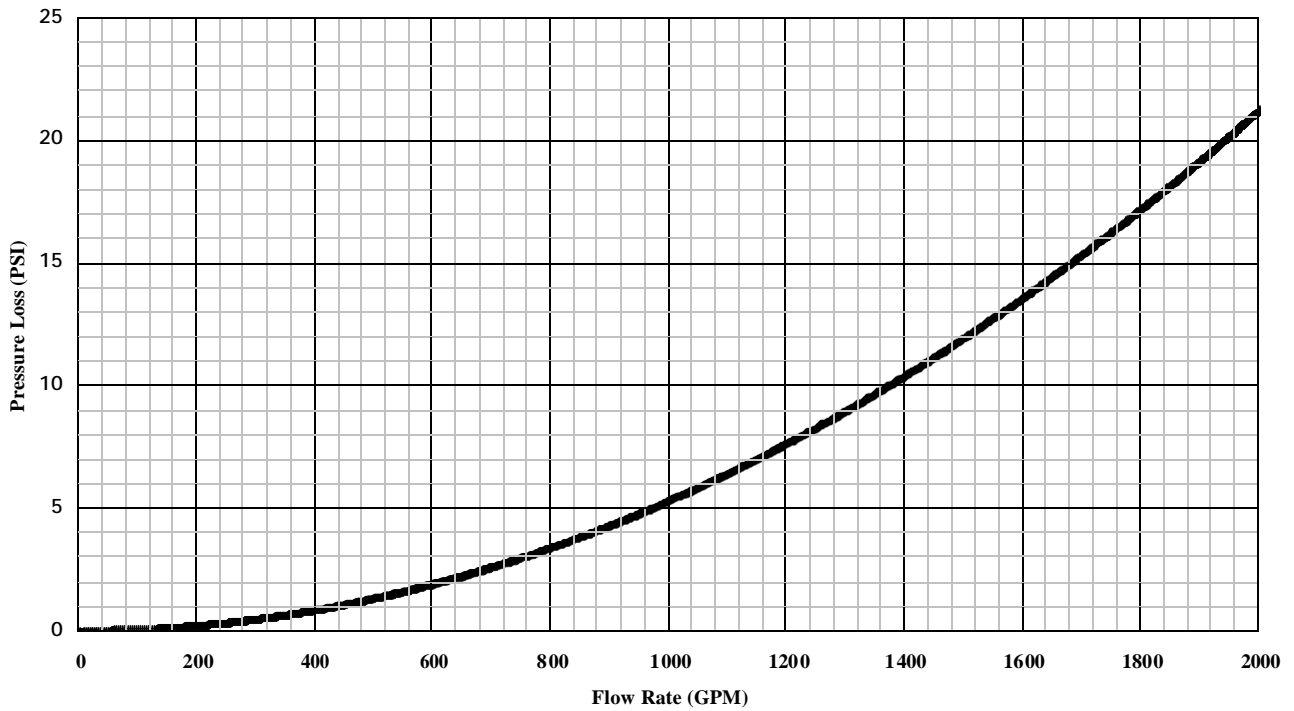

VII MAINTENANCE

Monthly Inspection and Maintenance (or after each use):

1. Cycle nozzle through all functions (straight stream, fog, etc.) to confirm that it is fully functional. If any hesitation in movement is seen, follow steps 2 through 5.
2. Apply a thin coating of Dow Corning #7 silicone grease or equivalent to the surfaces that the nozzle tip O-rings move across (See Illustration Below). Coat these surfaces with grease while the nozzle is in the straight stream position (all the way forward).
3. Run the tip back and forth through its full range of motion several times to distribute the grease.
4. Stop the nozzle tip in the wide fog position (all the way back) and wipe off any excess grease.
5. Run the nozzle through its entire range of motion at least once a week.

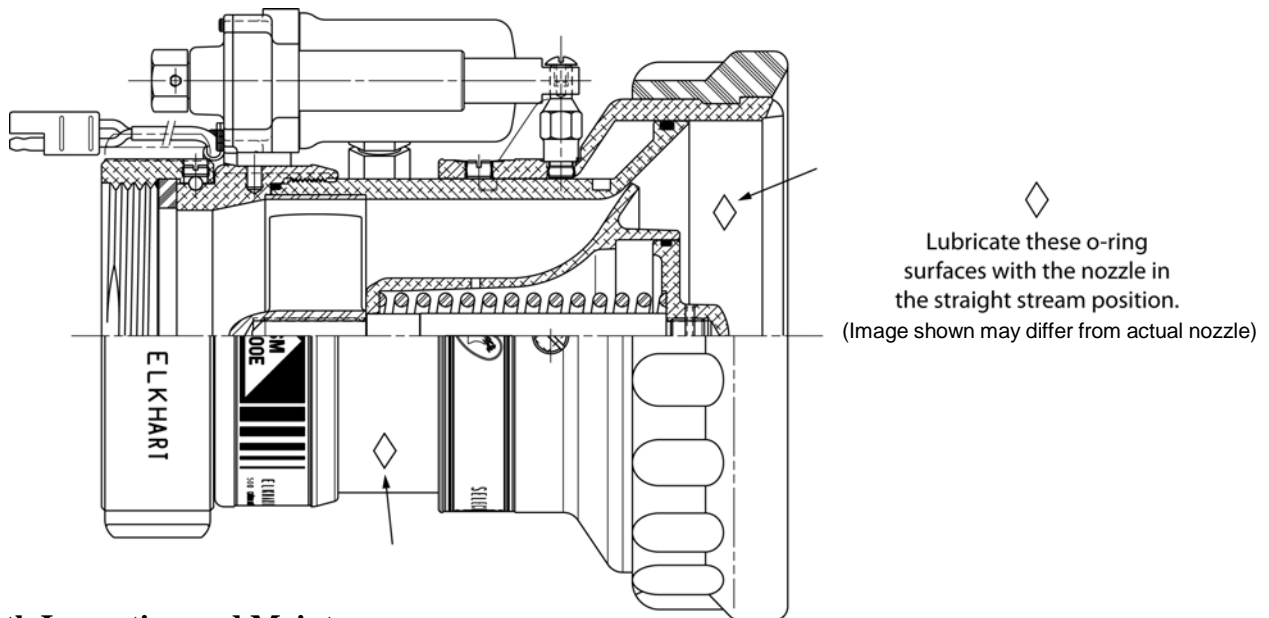

Six-Month Inspection and Maintenance:

1. Check motor control cables for wear and connectors for damage.
2. Check motor cables for binding through full movement of monitor and nozzle.
3. Check all painted surface for chips or scratches, and repaint as required.
4. Visually check all electrical equipment.

VIII TROUBLESHOOTING

- A. If nozzle stream cone is not tight; take nozzle and stream shaper off monitor and clean debris out of both. Flush firewater lines with nozzle and stream shaper off monitor, then reassemble.
- B. If nozzle will not move (to straight stream or fog); check electrical connection to make sure it is tight. If the electrical connection is tight and nozzle still will not move, manually cycle nozzle three (3) times, then try to move it electrically.
- C. Check for power at nozzle connection

Any problems that cannot be fixed/solved with this troubleshooting guide should be taken to your Elkhart Brass Representative to get further information.

⚠ WARNING: Do not attempt to disconnect or work on any electrical equipment in this system unless power is removed or the area is known to be non-hazardous.

